


Accessories

Pressure gauges(PG)

Order form

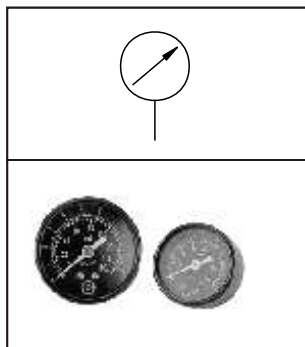

PG — 01

①

PG : Pressure gauges

①	Port	(1)PG-01	(2)PG-02		
		G1/8	G1/4		
Applied to		FRL-02M F-02M	FRL3-02.03.04.06.08 FRL2-02.03.04.06.08 R-02.03.04.06.08		

Automatic(AD)

Order form



AD — 14W

①

AD : Automatic

①	Port	(1)14W	(2)15N		
		outerM14	outerM15		
Applied to		FRL-02.03.04.06.08			

Sleeve valves(JH)

Order form



JH — 02

①

JH : Sleeve valves

①	Port	-01	-02	-03	-04
		G1/8	G1/4	G3/8	G1/2
Applied to		All F+R+Ls			